


# SIMPLE SET SINGLE OUTLET TAP TIMER INSTRUCTION MANUAL

Product Code: 1010299

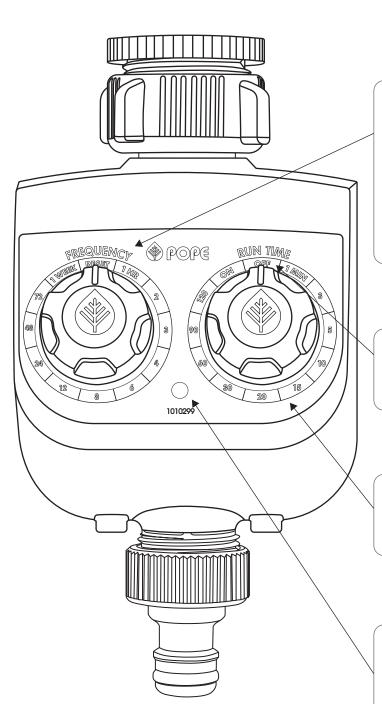

## **FREQUENCY**

Use this dial to set how OFTEN you want to water.

Note: The frequency starts from the moment you turn this dial. If you first turn the dial at 12pm in the morning to the 4 hour mark: The timer will come on again at 4pm, 8pm, 12pm etc.

This means that if you want an early morning start time, you need to get up early!

Please see back of page for recommended Run Time.

#### **MANUAL MODE**

Turn this dial to ON to run the timer manually, just like a tap. You will need to remember to turn it either OFF, or back to your orignal run time to continue running it automatically.



# **RUN TIME**

Use this to set how LONG you want the water to flow through the timer.

Please see back of page for recommeded Run Time.



## STATUS INDICATOR

This light can help indicate the status of your tap timer.



No Flashing - Timer is working correctly
Flashing Twice - indicated that new batteries have been installed.
Flash once - Indicated a program change from moving the dials.
Flashing once every 3 seconds - Battery lower than 2.65v
Flashing up to 3 times per second - Improper program logic

