



POPE

*the better way
to water*

GARDEN BED SHOPPING LIST

FOR A GARDEN BED 1200MM X 600MM



DRIP EZE 13MM
4800mm will be required

[BUY PRODUCT >](#)



**13MM BARBED
POLY ELBOWS X 5**

[BUY PRODUCT >](#)



**13MM BARBED
POLY TEES X 3**

[BUY PRODUCT >](#)



13MM POLY PIPE
Length required will depend
on distance to the tap

[BUY PRODUCT >](#)



**13MM RATCHET
(LOCKING) X 20**

[BUY PRODUCT >](#)



**PRESSURE
REDUCER X 1**


[BUY PRODUCT >](#)



**POPE SNAPSHOT
TAP TIMER X 1**

[BUY PRODUCT >](#)

Garden Tap
- Tap Timer
- With Pressure
Reducer

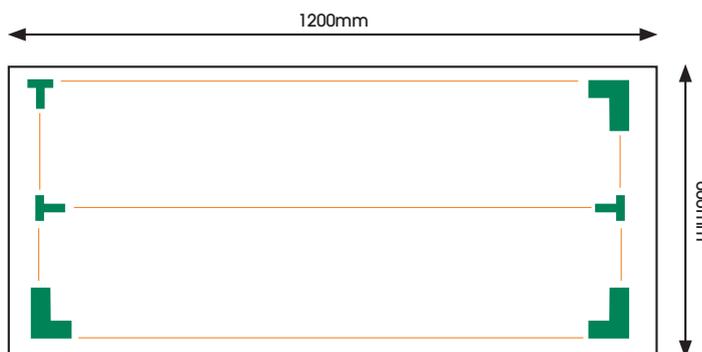

Products quantities will vary based on garden bed size. Check water pressure for the water reducer.

Available at
BUNNINGS
warehouse